



BY PRO-JECT AUDIO SYSTEMS

# INSTRUCTIONS FOR USE Pro-Ject Stereo Box DS

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO amplifier.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



Warning of a hazard for the user, the unit or possible misuse.



Important notice.


## Safety instructions

AC outlet voltages vary from country to country. Before connecting to the mains, make sure that the voltage in your area meets the voltage requirements printed on the power supply. The power cord is used to disconnect the unit from the mains. Make sure that the power cord is easily accessible at all times. Never handle the device, the power cord/power supply while your hands are wet or damp.



Avoid letting liquids enter the device or the power supply. Never place any item containing liquid, such as a flower vase on or near the device. Never spill any liquid on the device or the power supply. Never place any naked flame sources, such as lighted candles on or near the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.

## Connectors

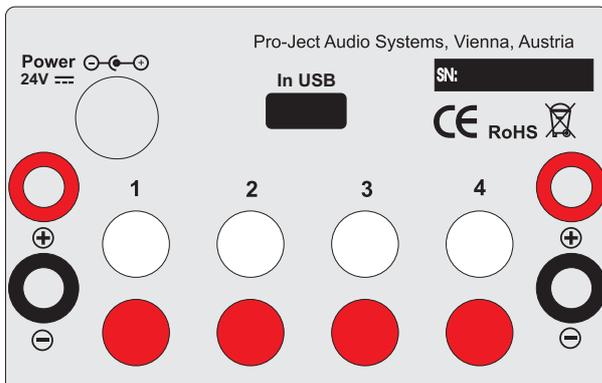

Make all connections whilst the amplifier is disconnected from the power supply.

Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.



The red speaker terminals carry the positive signal (+), the black speaker terminals the negative signal (-). Make sure the polarity of the connection is correct at each end of the cables.

Only connect one loudspeaker with an impedance not less than 4 ohms per channel.

Never use any other power supply than the one supplied with the unit.

## Inputs

Line level sources such as CD player radio or TV can be connected to the input sockets marked 1 - 4.

## USB input

A computer, used as a source, can be connected to the USB input.


## Connection to the speakers

The output terminals accept loudspeaker cables terminated with 4mm Ø Banana plugs, spades connectors or naked wire.

## Mains power connection

The unit is supplied with a power supply suitable for your country's mains supply. Check the label before connecting to ensure compliance with the mains rating in your house. Connect the low voltage plug from the power supply to the **Power 24V** socket before connecting the power supply to the mains.

## Remote control

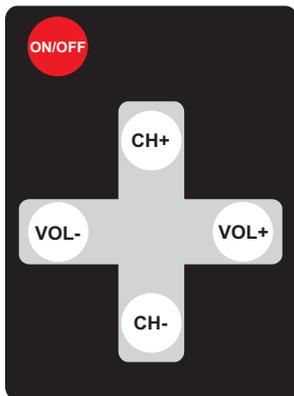

short press turns the unit on, long press takes it back into standby. Powered on, a short press activates and deactivates mute



and



adjust the sound volume




and



select the inputs

## Front panel controls

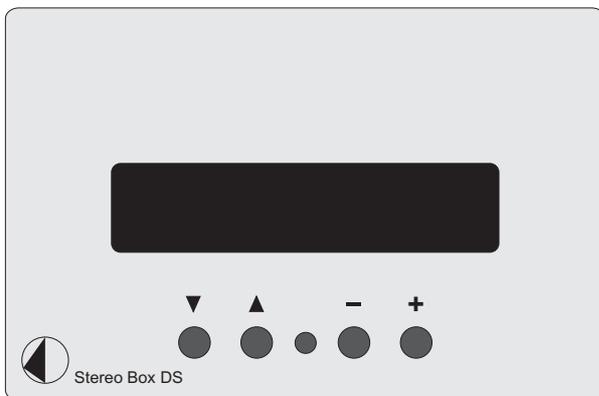

### To switch on from standby or to standby

▼ on the front turns the unit on or back into standby. The display shows **STANDBY** when the unit is in standby. While switching off, the unit saves the settings for input, volume and mute, to be set automatically after next power on.

### Dimming the display

Press and hold the buttons ▲ and + will change the display brightness - full, half and one third.

### Input selector

Pressing the **Input Select** buttons ▲ and ▼ selects the inputs 1 - 4 in turns. The selected input will be shown in the display.

### Volume

Adjust the volume (95 steps) to the desired level using the buttons - and +. The volume level will be shown in the display. **-95dB** indicates min., **00dB** max..

### Mute

While the unit is powered on,  activates and deactivates mute .

## Replacing batteries

Proceed as follows:

- Unlock and slide open the battery case cover
- Replace the battery.  
Make sure the battery is the right way round !
- Close the battery case cover



Battery type: 1 x CR2032 / 3V or 1 x CR2025 / 3V



*Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.*

## Technical specifications Pro-Ject Stereo Box DS

Power output:	2 x 40W/60W at 8 ohms/4 ohms (both channels driven)
Frequency response:	10Hz - 50kHz (+0dB/-3dB)
Channel separation:	> 40dB at 20kHz
Noise floor:	> -90dB (A weighted)
THD:	0,1% at 35W
Gain:	26dB
Line-level inputs:	4 pairs RCA/phono sockets
Input impedance:	100kohms
USB-input:	Mini B socket. USB cable supplied
D/A converter:	Texas Instruments PCM2706. Delta Sigma 16-Bit/48kHz, 128-times oversampling
Sampling rates:	32kHz, 44,1kHz and 48kHz
Speaker connectors:	4mm Ø banana plugs, spades connectors or naked wire
Outboard power supply:	24V/5A DC, suitable for your country's mains supply
Power consumption:	5A DC, <1W in standby
Replacement battery remote control:	1 x CR2032 / 3V or 1 x CR2025 / 3V
Dimensions W x H x D (D with sockets):	103 x 72 x 144 (163)mm
Weight:	620g without power supply

## Service

Should you encounter a problem which you are not able to alleviate or identify, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

## Warranty



*The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.*

## Copyright

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH  
Copyright © 2012. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.